


“DAH-610 Update to Mass Storage Version 1.43.22”

Before updating: Connect the USB Cable. (Please see below steps a, b, and c).


a.) If windows display this box, please Press “**Next**”, else go to Step 1 below.



b.) Click “Continue Anyway”.

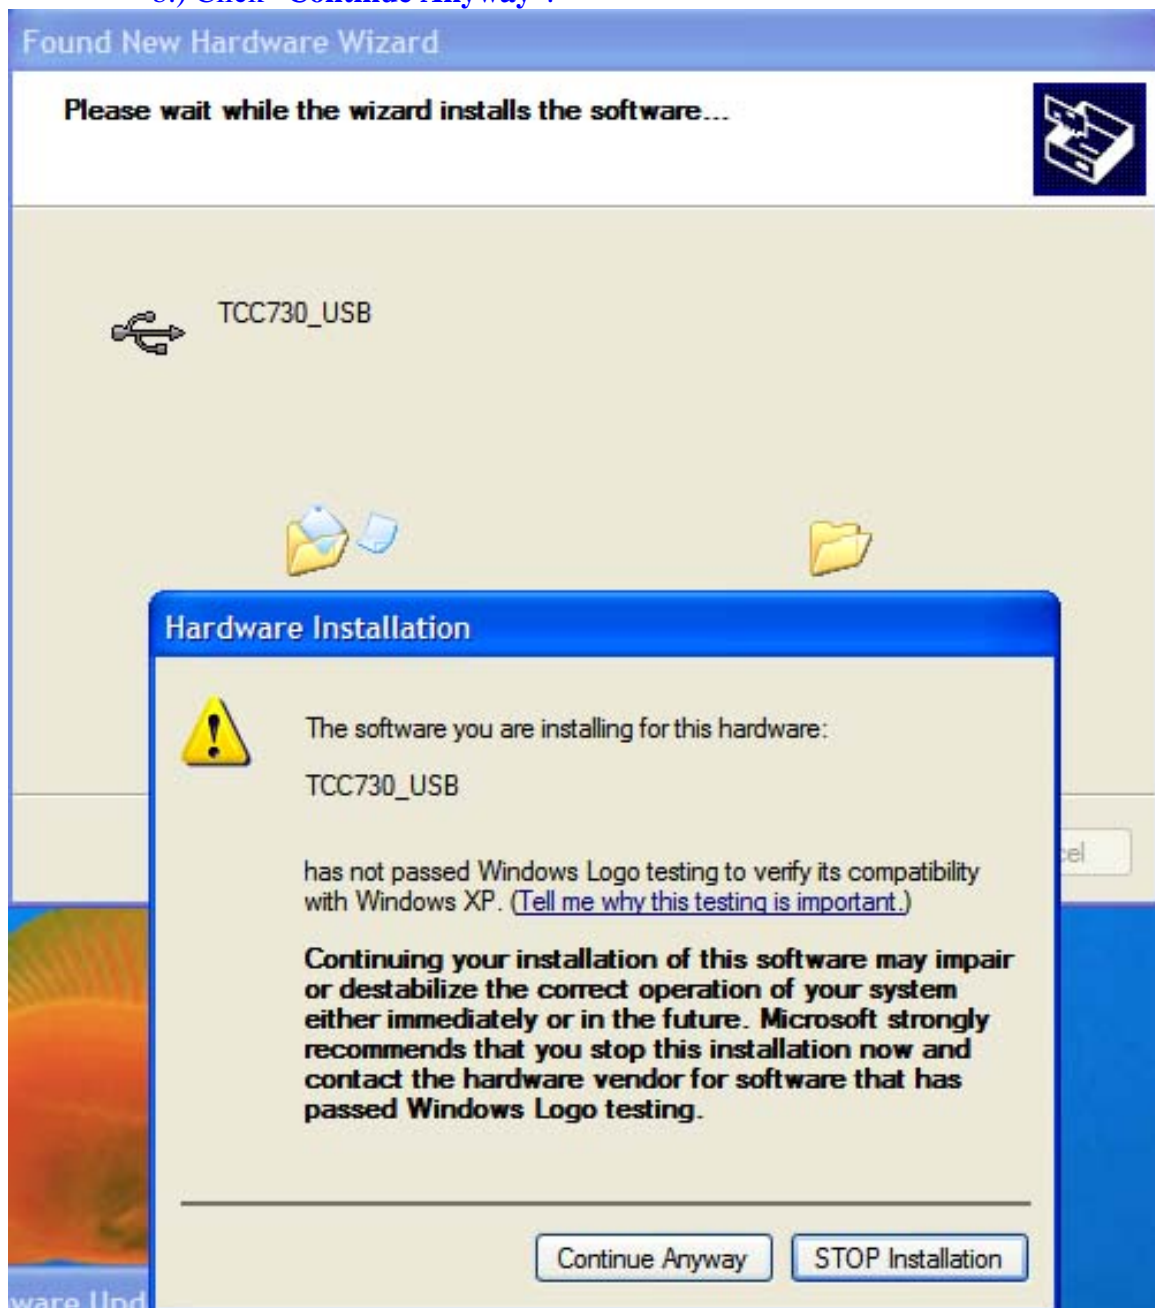


c.) Click **“Finish”**.

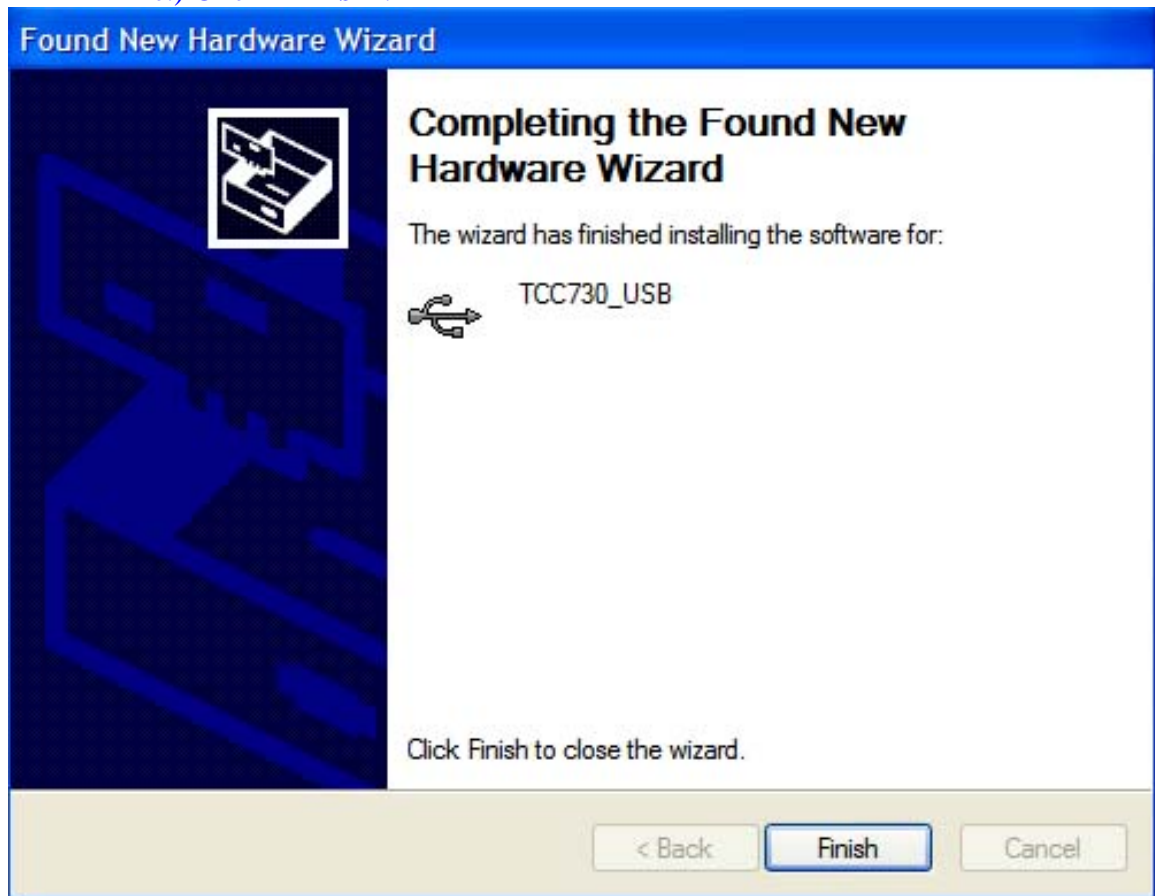


1.) Open or Double Click **DAH-610_Mass_Storage_Patch_Version_1-43-22.exe**.


2.) Click “Next”.

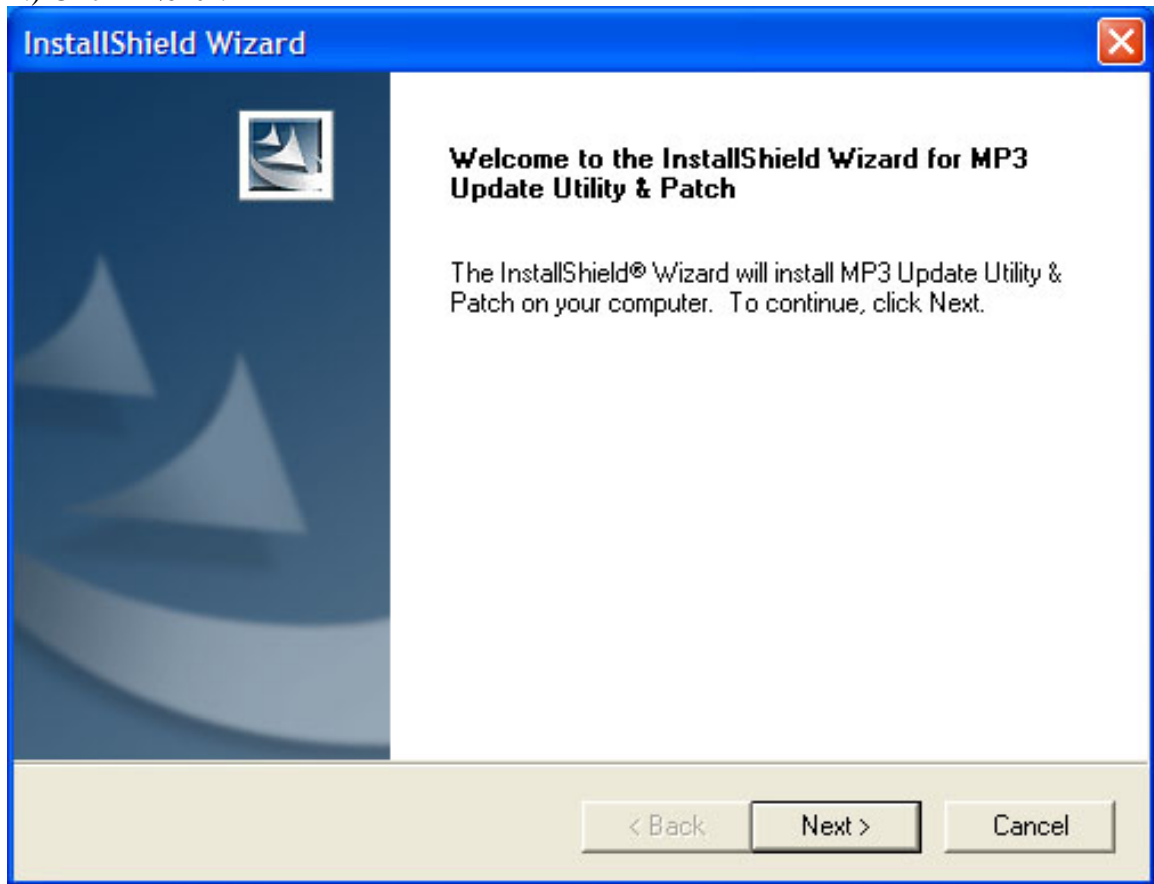

3.) Setup will install MP3 Update & Patch in the Destination Folder. Click “**Next**”.

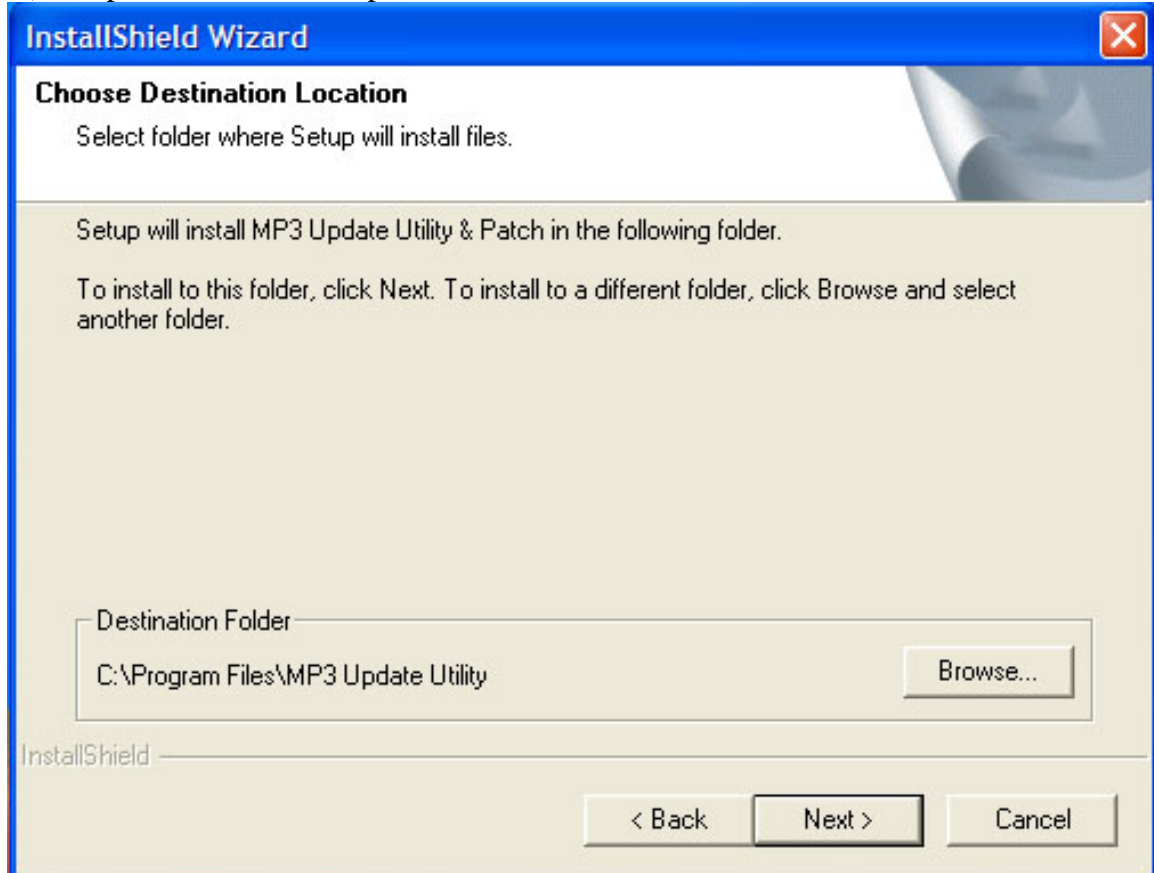

4.) Click “**OK**” to restart computer.

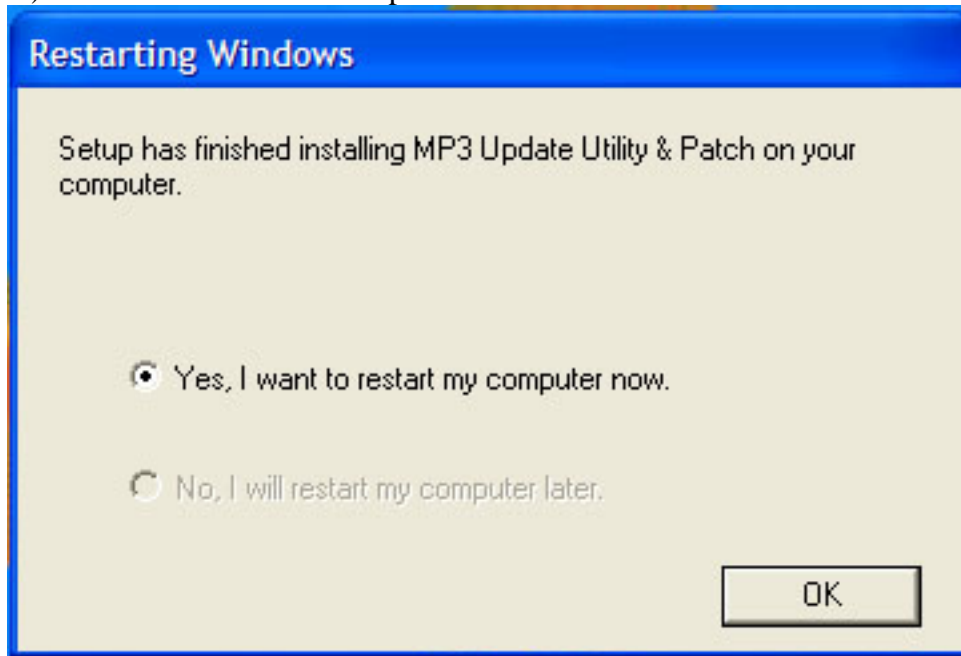


5.) Click “**CONTINUE ANYWAY**” when Windows Starts.




6.) Open or Double Click the file “**DAH-610_Mass_Storage_Patch_Version_1-43-22.exe**” one more time.

7.) Click “**Finish**”.

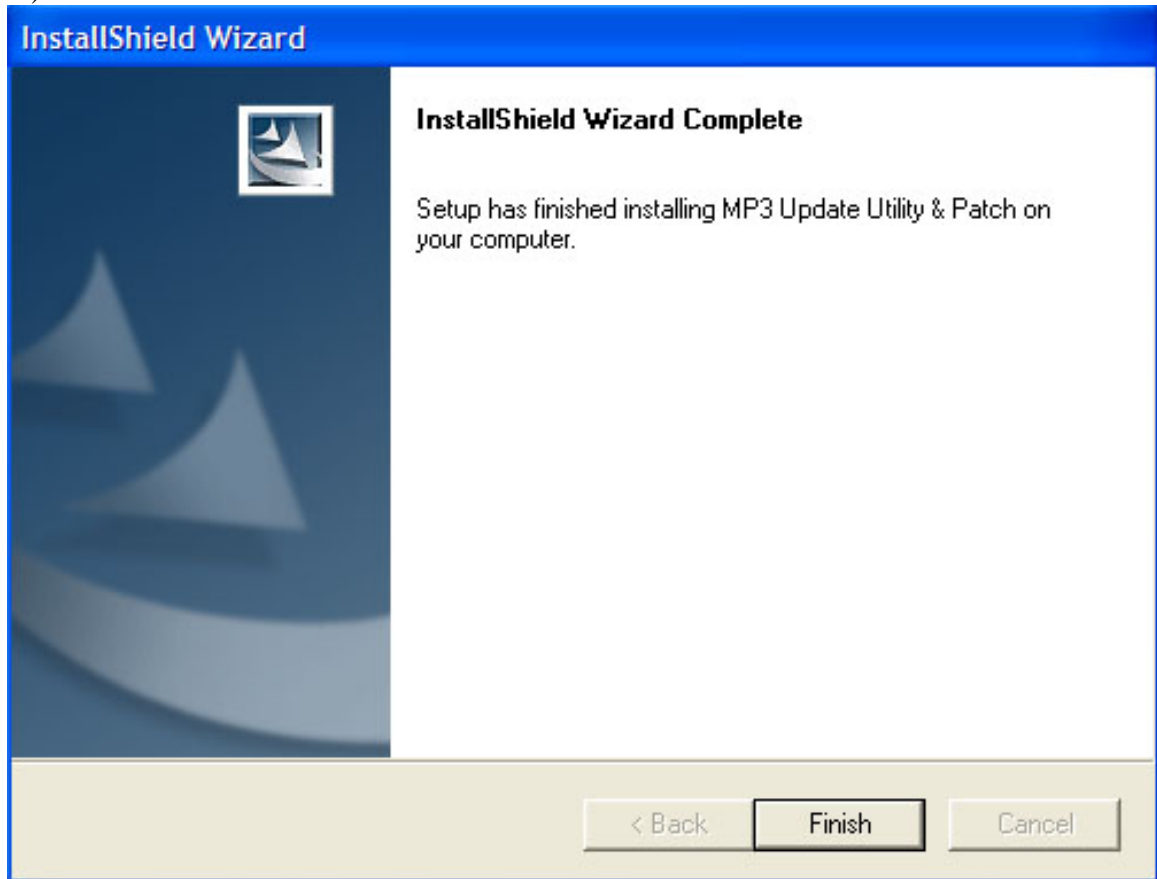


8.) Click “Next”.

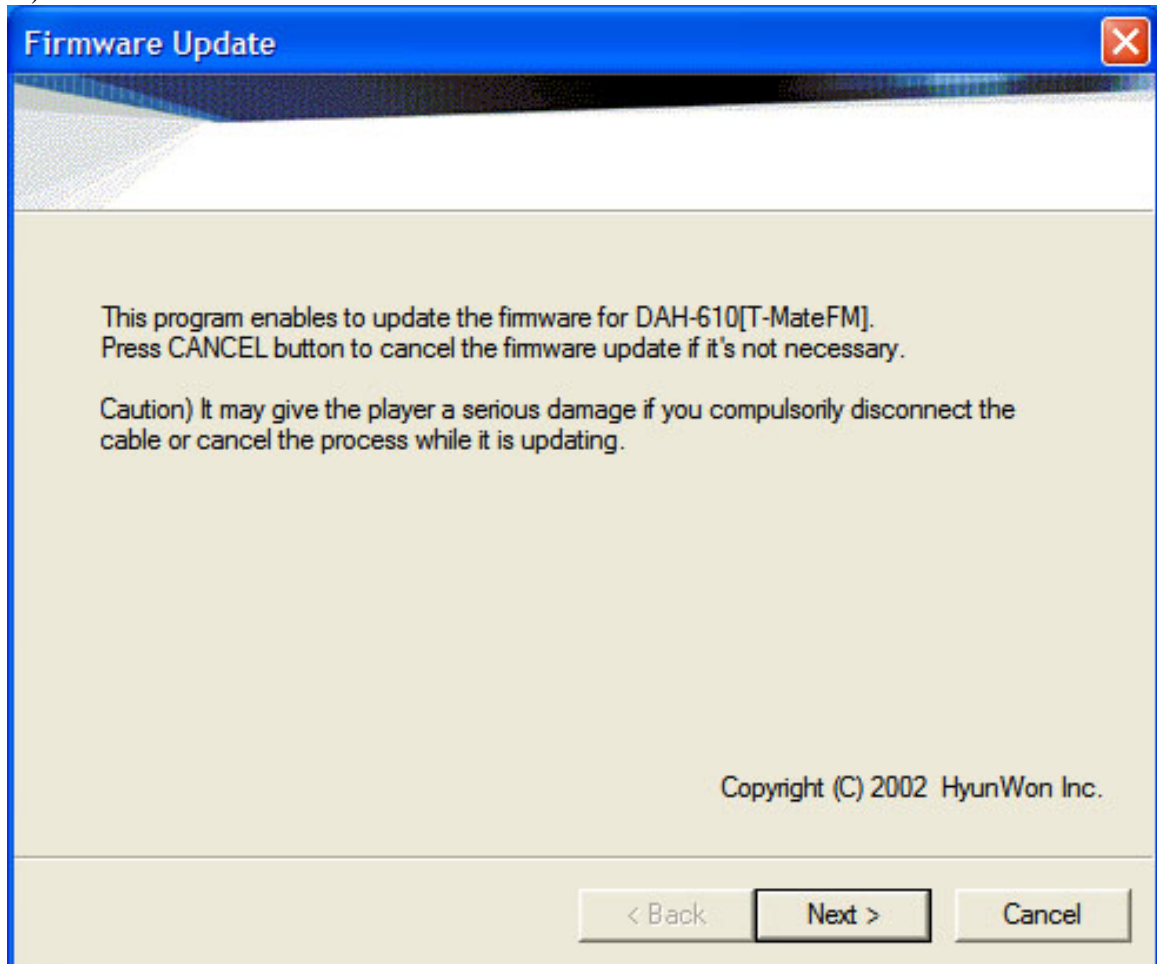

9.) Click “Next”.


NOTE: If “NEXT” is invisible, please disconnect the USB Cable and follow these steps:

- a.) Turn on the MP3 Player.
- b.) Set “Hold” on and Press “MODE” button for 2-4 seconds until “USB MODE” appears on the LCD Display.
- c.) Connect the USB Cable. (Please do not forget to Set “Hold” off after connecting to the USB Cable).

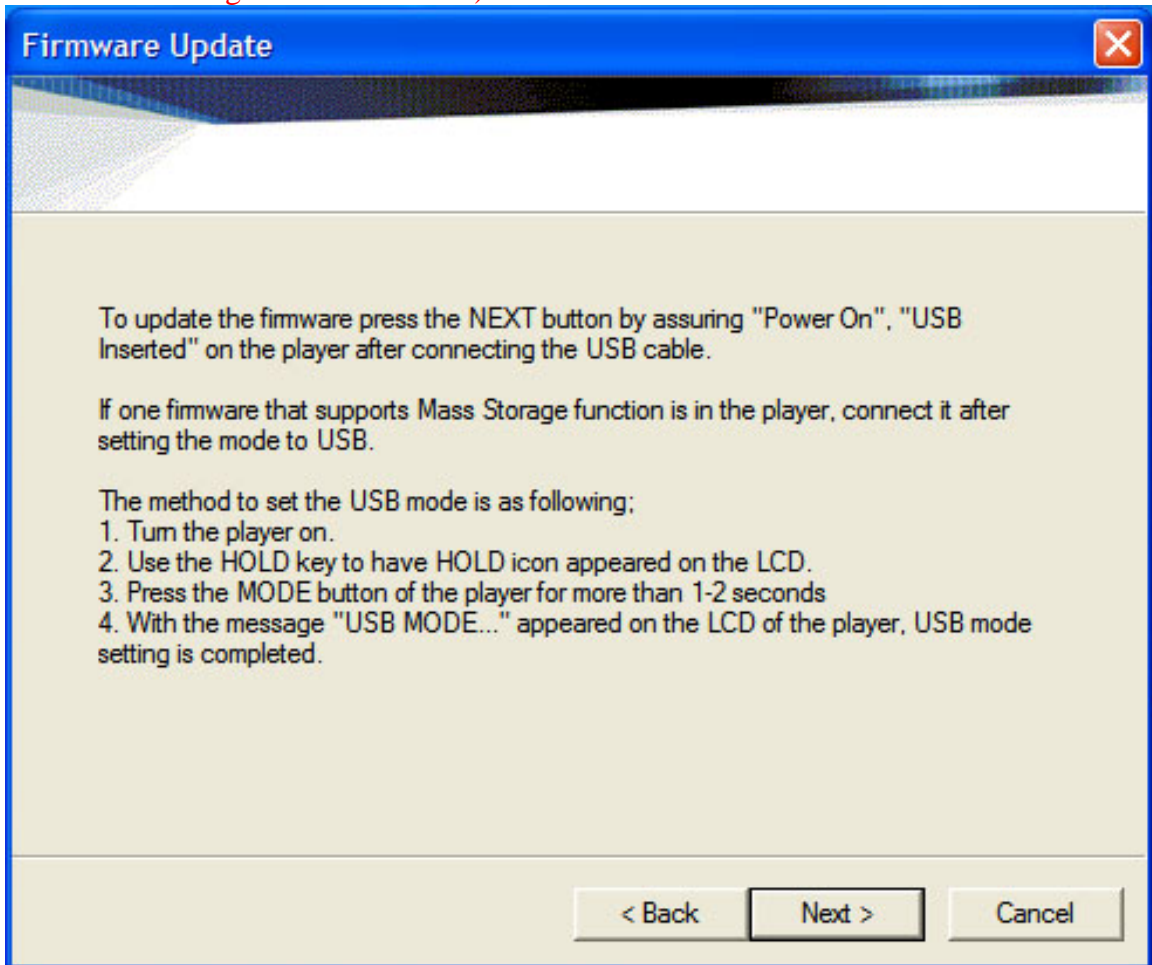


10.) Click “**Next**” to update the New Firmware version to 1.43.22.

NOTE: If the “Player firmware version:” have no version showing, please check and see the USB Cable is connected properly.

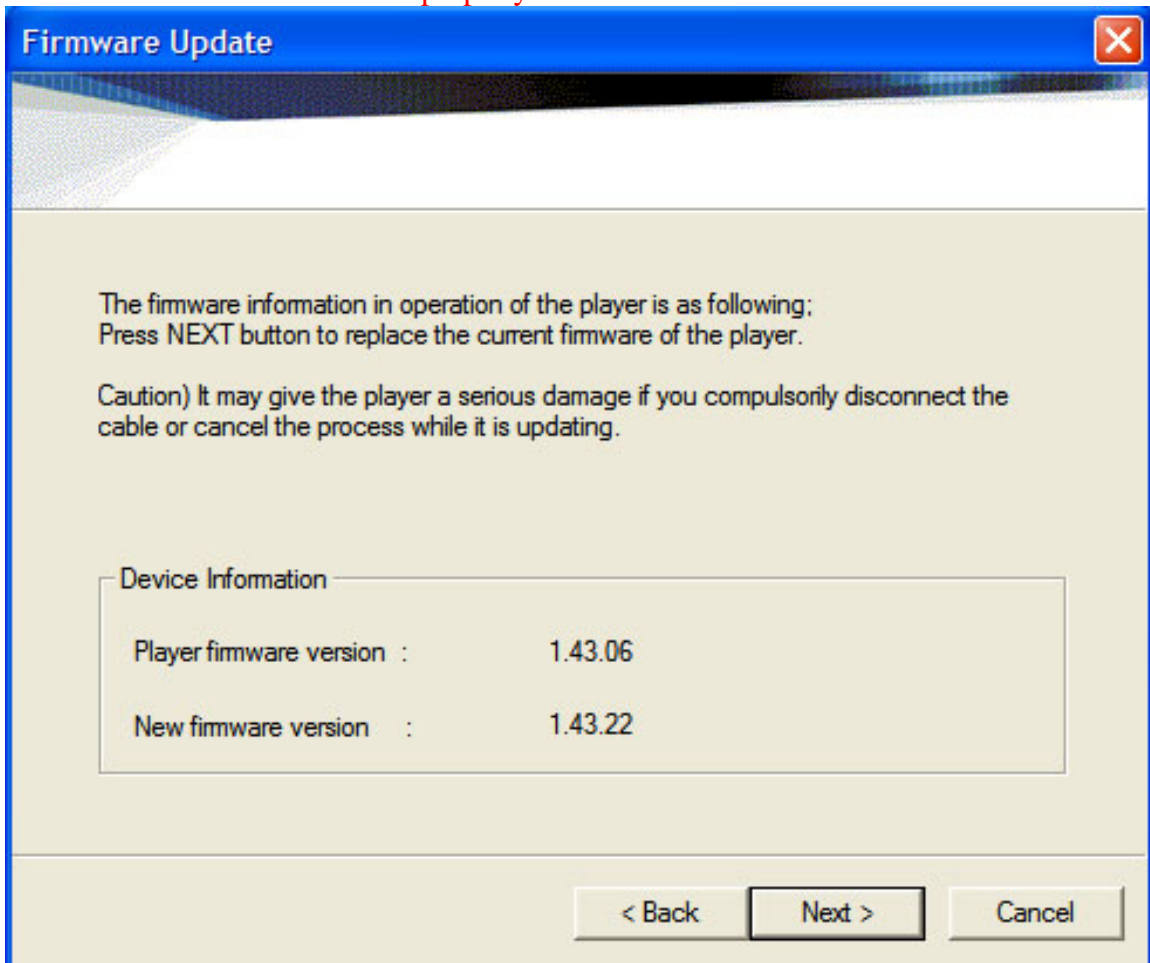

11.) Close the box by Clicking 'Cancel' or Click on Top Right 'x' button.

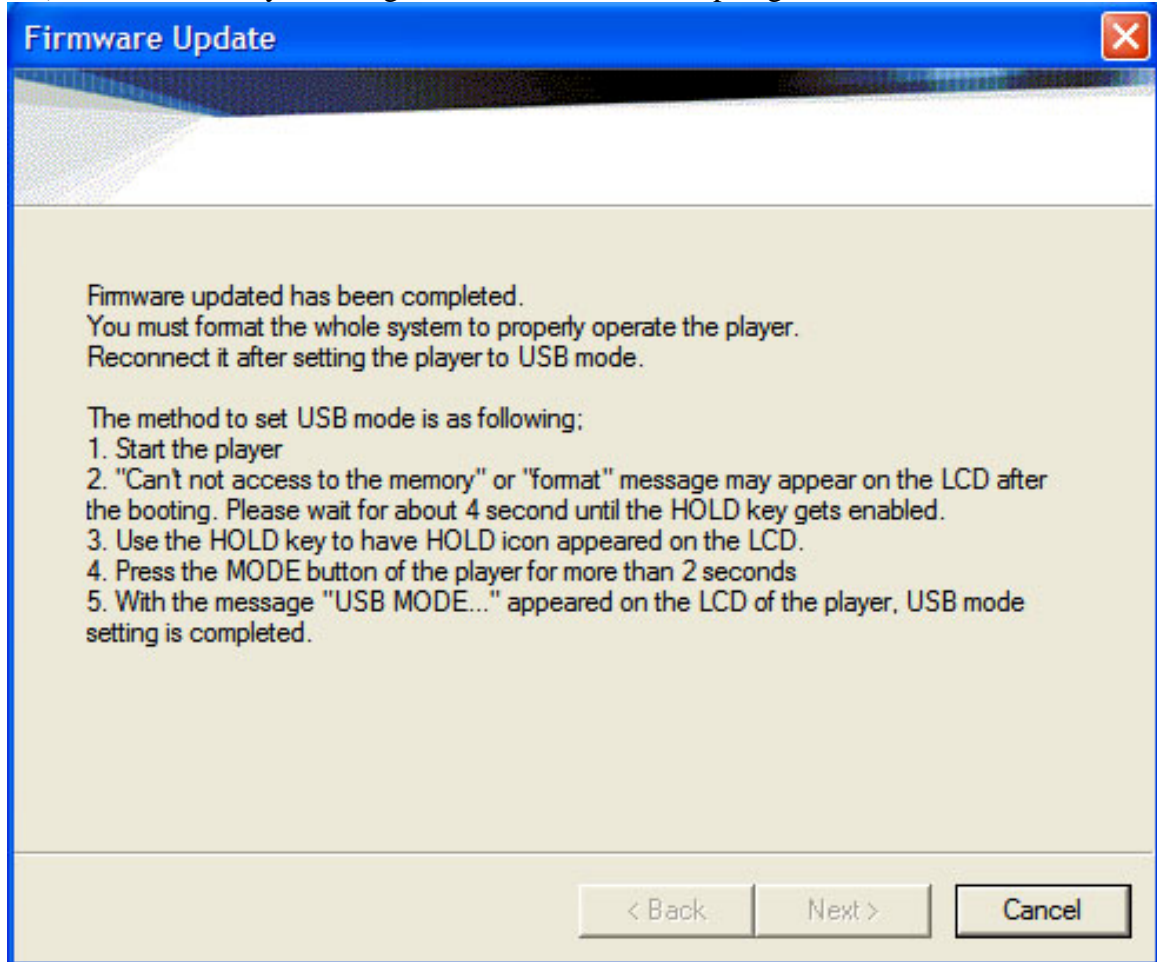

12.) DAH-610 LCD will display: **"Memory Access Fail: Format? Yes: Any Key"**
Press ANY KEY to Start Format the Device.

13.) Update **Successfully Completed!!!** Thank you for using DAH-610.

Notes:

How to Manually Format?

- 1) Press “Mode”, “Volume –“, and “Play” button at the same time.
- 2) "Flash Formatting" on LCD and formatting.
- 3) Automatically Power off when the format is completed.