
SERVICE 501A/B TELEPHONE SETS

1. GENERAL

1.01 Reissued to add nontechnical changes to Fig. 1.

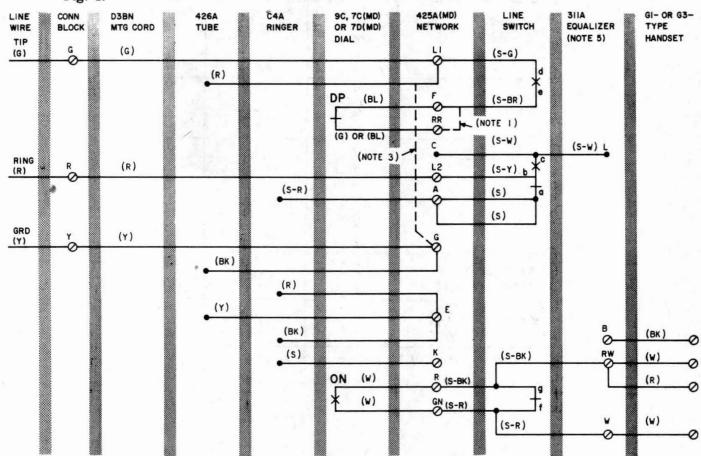

NOTES:

- I. FOR MANUAL SERVICE, MOVE (S-BR) LEAD FROM F TO RR TERMINAL.
- TO SILENCE RINGER PERMANENTLY: CONNECT (Y) MOUNTING CORD LEAD TO SAME TERMINAL AS (R) MOUNTING CORD LEAD AT CONNECTING BLOCK.
- 3. FOR NEGATIVE STATIONS IN OFFICES WITHOUT ANI, (R) LEAD FROM 426A TUBE MAY BE CONNECTED TO G IF RINGER OPERATION IS MARGINAL.
- WIRED FOR NEGATIVE RING PARTY FOR CLASSES OF SERVICE NOT SHOWN, REFER TO TABLE A.
- 5. -311A EQUALIZER IS PART OF 425A NETWORK.
- 6. LINE SWITCH SEQUENCE, HANDSET REMOVED.
 (1) bc MAKES (2) de MAKES (3) db BREAKS (4) gf BREAKS
- DP DIAL PULSE CONTACT
- ON OFF-NORMAL CONTACT

Fig. 1-\$501A/B (MD) Telephone Set, Connections

desprint Librata

TABLE A
LINE, RINGER, AND TÜBE CONNECTIONS

CHECKSE LIFEYS LISA

multive day to

WIRE OR LEAD		COLOR	NEGATIVE (—) RING PARTY* 1-5 RING	POSITIVE (+) RING PARTY* 3-7 RING					
					Ringer Leads		R BK S S-R	E E K A	A K E E
					Line Switch		S	A	A
426A Tube (3-Element)		R BK Y	L1 or G G E	A E G					
Mtg Cord in Set		R G Y	L2 L1 G	L2 L1 G					
Mtg Cord at Conn Block		R G Y	R G Y	R G Y					
Line Wire at Conn Block	Ring Tip GRD	R G Y	R G Y	R G Y					

A CONTRACT CONTRACTOR OF THE C

No. 1-25 TA B (MD) Televiona Get Com Literal

Note: Factory-wired for negative tip or ring station.

^{*} For tip party stations reverse (G) and (R) mounting cord leads.