CLIMBERS

	CONTENTS							PAGE		1.03
1.	GENERAL	•			:•5	5.93				return
2.	DESCRIPTION	•		•	٠	٠	٠	•	1	
	F CLIMBERS-AT-8530			n ĕ	•	٠			1	1.04 resha
	D AND E CLIMBERS		•				٠		2	7 desc
	SLEEVES	5 . €8	٠.		1•17				3	2. DE
	PADS	•	•				:(•ī	·	3	F CLIM
	STRAPS		•		•	٠		٠	4	2.01
	GAFF GUARDS	٠	٠	•	٠	٠	٠	•	4	sleeve,
3.	FITTING AND ASSEMBL	ING	C	LIM	BE	RS			4	an F
4.	PRECAUTIONS	•		•	•		·•		5	2.02
5.	INSPECTION OF CLIMBI	ERS		٠,	•	5 # 5		٠	6	foot st
6.	TESTING CLIMBER GAF	FS		1		٠	u∰. ∪	٠	8	with a integra
7.	FIELD MAINTENANCE	•	٠	٠	٠	٠	1.	•	9	2.03
	CLIMBER GAFFS		٠	٠		٠	٠		9	and th
	PADS		1.0.17	•		٠		•	11	at any adjusts is designany fit or the

I. GENERAL

- 1.01 This section describes climbers and associated items such as pad, straps, and gaff guards. Information on the care and maintenance of these items is included.
- 1.02 This section is reissued to change inspection frequency, to provide new pictures, and to cancel Section 460-300-105. Arrows are used to indicate changes.

- 1.03 When existing D, E, and F climbers with foot straps attached to a solid ring are returned for reconditioning, the solid ring will be replaced with a split steel ring.
- 1.04 Under no circumstances should a file or any other tool be used to reshape or sharpen a climber gaff. Part 7 describes the use of a hone for climber gaff maintenance.

2. DESCRIPTION

F CLIMBERS - AT-8530

- 2.01 The F climber is an adjustable length climber that consists of a leg iron, an adjustable sleeve, fasteners and gaff guards. The parts of an F climber are shown in Fig. 1.
- 2.02 The F climber is basically identical in construction to the D or E climbers. The foot strap assembly which secures the stirrup of the climber to the arch of the shoe is equipped with a removable split steel ring and is not an integral part of the climber.
- and sharpened. The climber shank is tapped and threaded for adjusting and securing the sleeve at any desired position (see 2.07 and 2.08). The adjustable sleeves are interchangeable. The gaff is designed so it can be machine sharpened without any filing to reshape the outer rounded surfaces or the ridge of the gaff. Do not use a file on these surfaces at any time. This would disturb the original design of gaff so that it cannot be machine sharpened satisfactorily.
- 2.04 Climbers can be ordered with or without sleeves. Sleeves and fasteners can be ordered separately. Pads, leg straps, and foot strap assemblies or foot strap components must be ordered separately. Gaff guards may be ordered separately; however, all new and factory resharpened climbers are returned with gaff guards installed.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

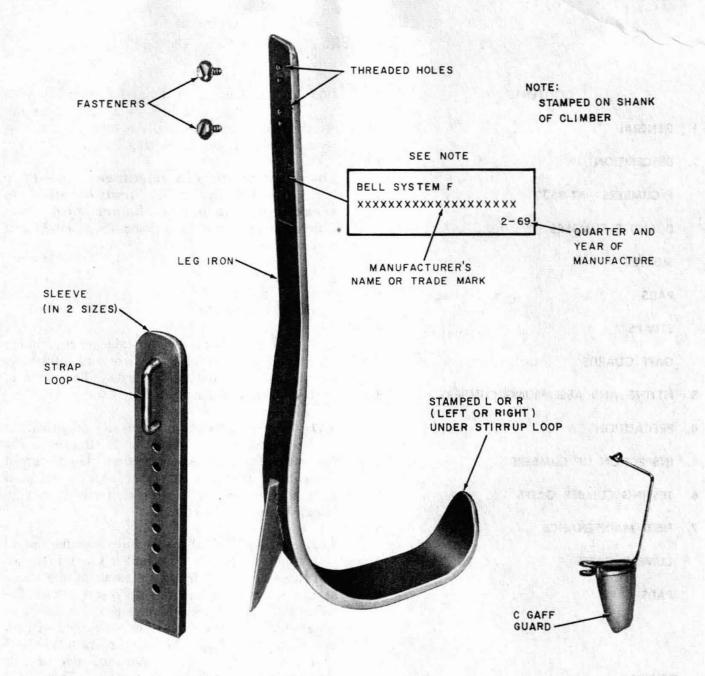


Fig. 1—Parts for F Climber

they are made for the left or right foot and are marked "L" or "R" just below the ring loop at the end of the stirrup. Some older climbers may not have been marked. Climbers can be identified as left or right by holding the climber with the gaff toward you and pointing up and noting the direction the stirrup is offset. If the offset is to the right as shown in Fig. 2, it is a

right climber; conversely, if the offset is to the left, it is a left climber.

D AND E CLIMBERS

2.06 The superseded D and E climbers are basically identical to the F climber except that or these climbers the C and D foot straps have been rated "Manufacture Discontinued." These foot

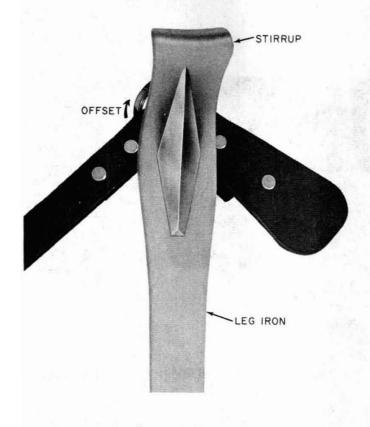


Fig. 2-Stirrup Offset "Right"

traps have been replaced by the E climber foot trap.

LEEVES

e.07 The sleeves used on adjustable climbers are designed to fit snugly over the shank of he leg irons and to be securely locked in the lesired position by fasteners. The sleeves are vailable in two lengths and can be adjusted in ncrements of 1/4 inch. Figure 3 illustrates the leeves, the lengths available, and the adjustment ange of each sleeve.

with two hexagon head machine screws nown as fasteners, except on the shorter adjustments f 14 3/4 inches to 15 1/2 inches for the short leeve and 17 3/4 inches to 18 1/2 inches for the ong sleeves. On these adjustments, only one etscrew is used for attachment. For these lengths, he wedging of the sleeve and leg iron provides a ufficiently tight fit on the lower part of the leeve. The fasteners are inserted through the oles in the sleeves from the side with the strap oop and secured in the threaded holes of the leg

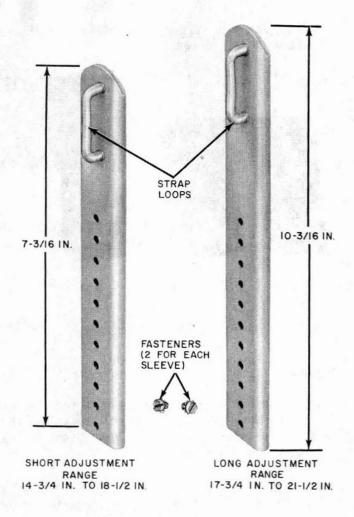


Fig. 3—♦Sleeves for Adjustable Climbers♦

irons. The heads of the machine screws are slotted for tightening with a screwdriver. The fasteners are equipped with spring steel lockwashers.

PADS

2.09 Pads are used with climbers to protect the shins and calf of the leg against irritation by rubbing when the climbers are strapped to the legs. Plain leather, felt lined, and cushioned pads are available as shown in Fig. 4. Cushion pads are coded B climber pads (angle) and C climber pads (straight). The plain and felt lined pads are generally used when wearing boots that cover the calf of the leg. The wrap-around design of the B climber pads furnishes additional protection at the shins. Occasionally the top edge of a new pad may initially dig into the leg in use. This can be overcome by dulling the top edge by rubbing with a rounded metal tool.

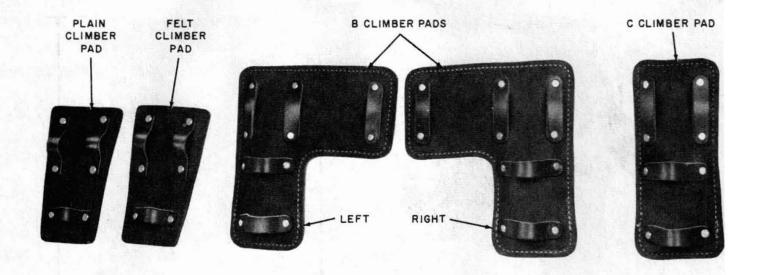


Fig. 4-Pads

STRAPS

- 2.10 The foot straps are attached to the climber so the buckle assembly will be across the foot instep when fastened. Figure 5 shows the foot strap on the climber.
- 2.11 The B climber strap (Fig. 6) consists of a 22- or 26-inch strap with a buckle permanently attached. The B climber strap is used to hold the pad on the leg iron and to fasten both to the employee's leg when the climber is worn.

GAFF GUARDS

2.12 Gaff guards are used to protect gaffs and employees when climbers are not being used. They also protect other tools from damage that are stored in the vicinity of climbers. Figure 7 shows the gaff guard installed.

3. FITTING AND ASSEMBLING CLIMBERS

- 3.01 Determine the correct sleeve to use by measuring the distance from the lower edge of the projecting kneebone to the underside of the shoe at the arch as shown in Fig. 8 and subtract 1/2 inch from this length. Select the climber sleeve that covers this range (2.07, Fig. 3). When ready to assemble the climber for use, proceed as follows:
 - Place the split steel ring of the E climber foot strap on the climber stirrup loop and

then place the foot strap and buckle assembl on the split ring.

- (2) Place the B climber strap and pad on th sleeve as shown in Fig. 6. The strap shoul be placed so the tongue will point toward th back of the leg when buckled.
- (3) Place the sleeve on the shank of the climber step on the stirrup and buckle the foot straso the stirrup is held firmly against the arch of the shoe. Adjust the sleeve to a position that is most comfortable.
- (4) Place one of the slotted hexagon head set screws through the hole in the sleeve tha is aligned with the threaded holes in the climbe and tighten the setscrew to hold the sleeve in place.
- (5) Strap the climber to the leg as shown in Fig. 9 to see if it feels comfortable. Climber should be adjusted to the maximum length which is most comfortable.
- (6) If the climber feels comfortable, remove the climber and add the second setscrew (see 2.08) and tighten both screws to hold the sleeves securely. If uncomfortable, move the setscrews up or down one hole on the sleeves as required to find the most comfortable position
- (7) Repeat the procedure for the other climber

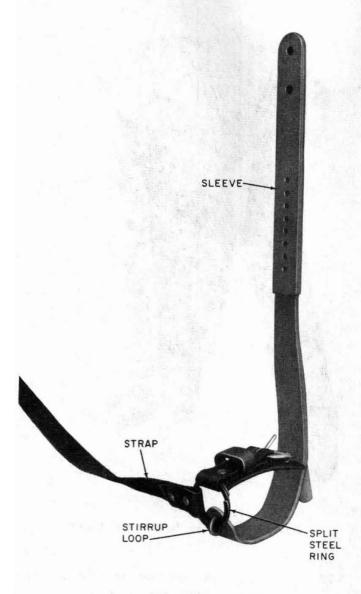


Fig. 5—Foot Straps Attached to Climbers

I. PRECAUTIONS

- 1.01 Observe the following precautions when storing, transporting, and using climbers:
- (a) Equip climbers with gaff guards, when not in use. Gaff guards protect employees as well as the gaff tips and cutting edges when climbers are carried or are stored in tool boxes or other storage spaces. They also prevent damage to safety straps and body belts when stored in the same compartments with climbers.
- (b) Use climbers adjusted to correct size. (See part 3).

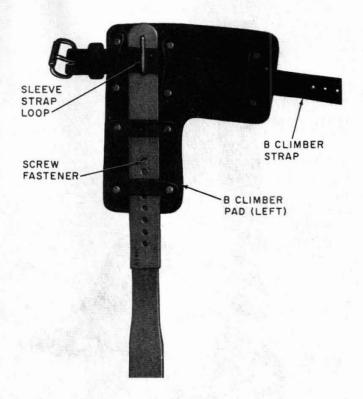


Fig. 6—B Climber Strap and Pad Installed on Climber

- (c) Do not bend leg irons. If discomfort exists, use cushion type pads.
- (d) Never wear climbers on work where they are not required as, when walking between poles, when working on the ground, a ladder, an aerial lift, a stepped pole where the work can be performed safely from the steps, in trees, or while traveling in a motor vehicle or any other type of conveyance.
- (e) When climbing past another employee who has his safety strap in place around the pole, special care should be taken to avoid gaffing the other employee, his safety strap, or other equipment.
- (f) When climbing past attachments on poles, care should be taken to avoid dragging climbers or foot against these attachments.
- (g) Do not use the gaff as a pry.
- (h) When climbing, avoid placing the gaff in or near a crack, knot, nail, or tack, etc.
- (i) Inspect climbers in accordance with part 5.



Fig. 7—C Gaff Guard Installed



5.01 Each employee shall assume the responsibility for determining that his climbers, sleeves, pads, straps, gaffs, and gaff guards are in good condition. Upon receipt of the climbers and at least once each day before they are used, the employee shall inspect the climbers and associated items in accordance with 5.03 to detect any flaw that may have developed. In addition, the climber shall pass the pole cutout test, as described in Part 6, the first time the climbers are used each week. If at any time during use the employee thinks the condition of the climbers may have changed, the climbers shall be reinspected and if there is any question that the gaffs are in good condition, check them with the pole cutout test. Climbers which do not pass this test, even after honing are considered defective and must not be used. They should be replaced in accordance with local procedures.

5.02 The employee's supervisor shall make an inspection of the climbers at intervals of not more than 3 months.



Fig. 8—Measuring for Climber Length

- 5.03 The important conditions to look for when inspecting climbers are as follows:
 - (a) Fractured gaff or hairline crack, particularly on the inner surface (bottom) of the gaft and the cutting edges
 - (b) Loose gaff
 - (c) Broken or loose stirrup ring loop
 - (d) Fractured leg iron or start of fracture particularly on the leg side of the shank at the top of the taper below the sleeve and the gaff attachment area
 - (e) Nicks and depression in gaff due to impac with a hard object
 - (f) Ridge of gaff not straight



Fig. 9—Climber Strapped to Leg

- (g) Dull gaff beyond restoration by means of honing
- (h) Broken or distorted gaff point
- (i) Straps worn through one layer of fabric or with cuts or enlarged buckle holes that would affect the strength
- (j) Broken, severely rusted, or otherwise defective strap buckle or split steel ring
- (k) Fractured sleeve or start of fracture
- (l) Broken or loose sleeve strap loop
- (m) Broken or loose rivets on straps or pads
- (n) Broken or torn loop on strap or pad
- (o) Plastic missing from gaff guard
- (p) Loose sleeve fastener.
- i.04 If any of the conditions, 5.03(a) to (h) inclusive, are found, or if the condition of he climber is such that there is good cause to loubt its safety, it shall not be used but shall be

exchanged for climbers in good condition. If any of the conditions (i) to (o) are found, the item should be replaced. If condition (p) is found, the setscrew should be tightened or replaced, or the sleeve replaced.

5.05 Figure 10 illustrates the surfaces, ridge, and point of a properly shaped gaff. The ridge of the gaff is straight. Note that the point of the gaff is rounded to meet the ridge.

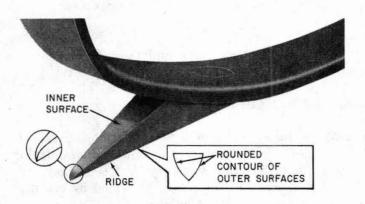


Fig. 10—Gaff Profile and Point

causes of climber cutout due to unsatisfactory gaff conditions. A dull point or dull cutting edges results in insufficient gaff penetration as shown in Fig. 11 causing the resultant cutout. If the straight ridge of the gaff is altered as indicated in Fig. 12, a prying action is produced that will cause climber cutout. Under no circumstances should any part of the gaff be altered by filing. Proper field maintenance of factory shaped gaffs is described in Part 7.

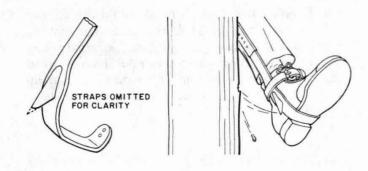


Fig. 11—Dull Gaff

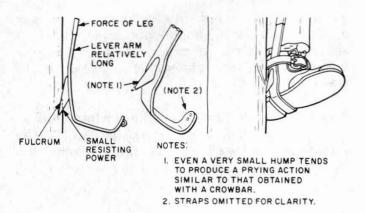


Fig. 12—Gaff Ridge and Point Altered

6. TESTING CLIMBER GAFFS

- 6.01 Climber gaffs shall be tested when received and thereafter any time there is any doubt as to their sharpness ▶and the first time they are used each week. They shall be tested by making the pole cutout test as follows:
 - (1) Place the climber on the leg and fasten the foot strap in the usual manner. Do not fasten the leg strap.
 - (2) Remove the gaff guard and put on your gloves. Place your hand between your leg and the climber pad, palm facing the pole. Place the other hand around the pole to balance yourself. With your leg at about a 30 degree angle, the normal climbing angle, aim the gaff toward the center of the pole about one foot above the ground line. Lightly jab the gaff in the pole, so that it penetrates the wood about 1/4 inch, see Fig. 13. Do this at a location where the pole is free of cuts and knots.
 - (3) Keeping just enough pressure on the stirrup to keep the gaff in the pole, but not so much as to cause the gaff to penetrate any deeper, push the climber and your hand toward the pole by moving your knee until the strap loop of sleeve is against the pole as shown in Fig. 14.
 - (4) Making certain the strap loop is held against the pole with pressure from your leg, gradually exert full pressure straight down on the stirrup without raising your other foot



Fig. 13—▶Jabbing Gaff in Pole

off the ground, so as to maintain balance if the gaff does not hold.

(5) A gaff, which is correctly shaped and is sharp, will cut into the pole and hold in a distance of 2 inches or less. Measure the cut



Fig. 14—♦Climber Holding

from point the gaff enters the pole to bottom of cut at surface of pole as indicated in Fig. 15. A gaff that is correctly shaped but dull or burred will cut in and hold but the length of the cut will be more than 2 inches. A convenient tool for measuring the length of a cut is the gaff guard. The clasp portion of the gaff guard is 2 inches long and can readily be used as a

measuring device. A gaff, which is very dull or deformed in some way, will cut out of the pole or plow through the wood for a distance greater than 2 inches. Do not use climbers that cut out or plow through the wood for a distance greater than 2 inches. If the climber gaff is dull, sharpen with a hone, as described in part 7 and repeat cutout test. If climbers still do not pass the pole cutout test, they are defective and should be replaced.

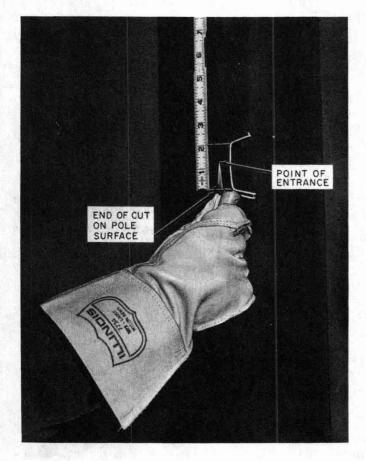


Fig. 15—▶Measuring Gaff Cut

7. FIELD MAINTENANCE

CLIMBER GAFFS

7.01 During normal use of climbers the edges along inner surface (cutting edges), Fig. 16, may become dull. The honing stone should be used to maintain sharp edges. Remember that even a dull gaff can cut your finger so hone carefully.


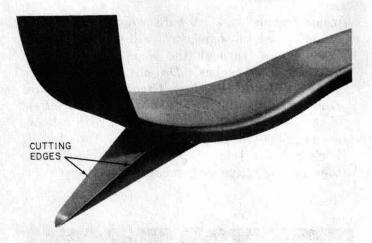


Fig. 16—Gaff Cutting Edges



7.03 First, if there are any small burrs along the cutting edges, remove them by holding the hone against the side of the gaff and carefully following the edge around to the tip as indicated in Fig. 17 and 18.

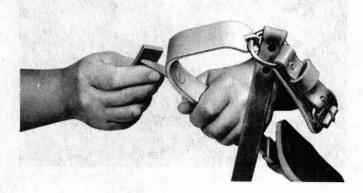


Fig. 17—▶Removing Burrs From Top Cutting Edge

7.04 Hone the inner surface of the gaff by starting the stroke near the leg iron and continue over the rounded curve of the tip as indicated in Fig. 19. Stop the honing stroke before the stone slides off the end of the gaff to prevent dulling the tip. About 20 to 25 strokes of the honing stone should be enough. Do not attempt to reshape the tip of the gaff.

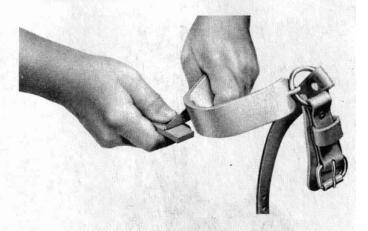


Fig. 18—₱Removing Burrs From Bottom Cutting Edge

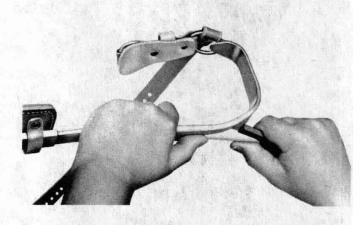


Fig. 19—₱Honing Inner Surface●

7.05 Discard the honing stone when its surface becomes covered with grooves due to use. A badly worn hone or one with grooves will round-off the gaff cutting edges, thus causing climbers to fail the pole cutout test. The life of the hone can be extended by switching ends and sides.

7.06 When using a vise to hold a climber, always protect the leg iron by placing wood blocks between the vise jaws and the leg irons as shown in Fig. 20. This prevents scoring the leg iron which may weaken it.


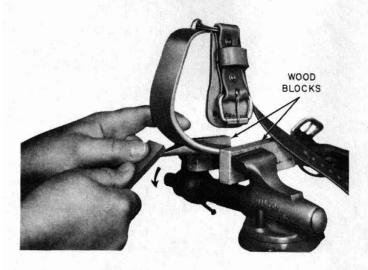


Fig. 20—Using Vise for Honing Gaffs

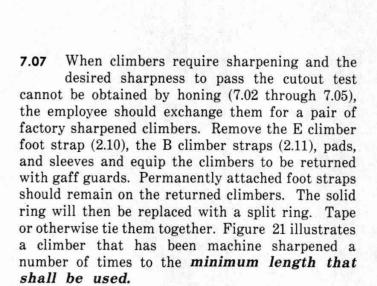

PADS

- 7.08 Pads should be maintained clean and pliable for maximum comfort. Maintain this condition, by using saddle soap or neats-foot oil about every 3 months as follows:
 - (a) Clean with a damp sponge using a neutral hand soap.

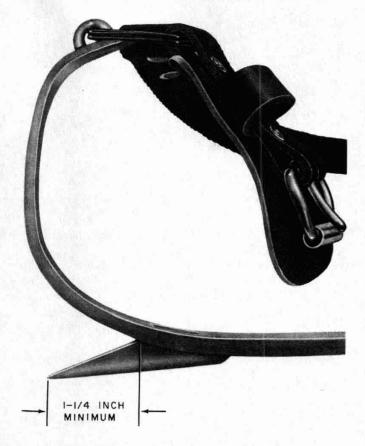


Fig. 21—Gaff Sharpened to Minimum Length

- (b) With sponge and clean water, work up a lather using a good grade of saddle soap. Work lather well into pad and put in shade to dry. When lather is almost dry, rub the leather vigorously with a soft cloth.
- (c) About every 6 months instead of dressing with saddle soap as in (b), clean as in (a), then while leather is still damp apply about 1/2 teaspoon of neats-foot oil on the loop side of the pad, apply oil gradually with hands using long light strokes to work into leather. After oiling allow pads to dry overnight then rub vigorously with a soft cloth to remove excess oil.