SUBSCRIBER SETS — 685B USED WITH COIN COLLECTORS CONNECTIONS

TABLE A

Type of Service Prepay Manual and Dial Type Coin Collectors	Terminal Location		Subscriber Set Connections (Wire or Lead)															
		Ringer Lead				Straps Network to Terminal Block		S-36 Relay Lead				Local Wiring from Coin Collector						
		S	ВК	R	S-R	S- BR	BR- Y	R	Y	BK *	s	G	R	вк	Y	G	R	Y
Handset Types: 191, 195, 196, 197 (CN, DN, GN, HN) (CNS, DNS, GNS, HNS) (CNT, DNT, GNT, HNT) 220, 223 (C, D, G, H) (CT, DT, GT, HT) 230, 233 (C, D, G, H)	Network	K				С	A			В		GN	R	В	RR			_
	Terminal Block		L1	L2	1	L2	1	L1	L2		K					L2	L1	ĸ

^{*} Sets may have BK lead from the S36 relay connected to terminal 2 of terminal block. Move strap to terminal B of 425E network.

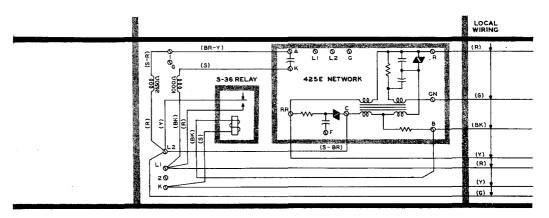


Fig. 4 - Circuit Diagram for Connection With Coin Collectors